



TX0004.01

RCL M Transmitter 2, 4 Function


LED

Blinks when Transmitter is active.

ON when a Transmitter Button is pressed.

Pulses while transmitting when battery is low.

STOP Button switches off the Receiver and the keypad function buttons

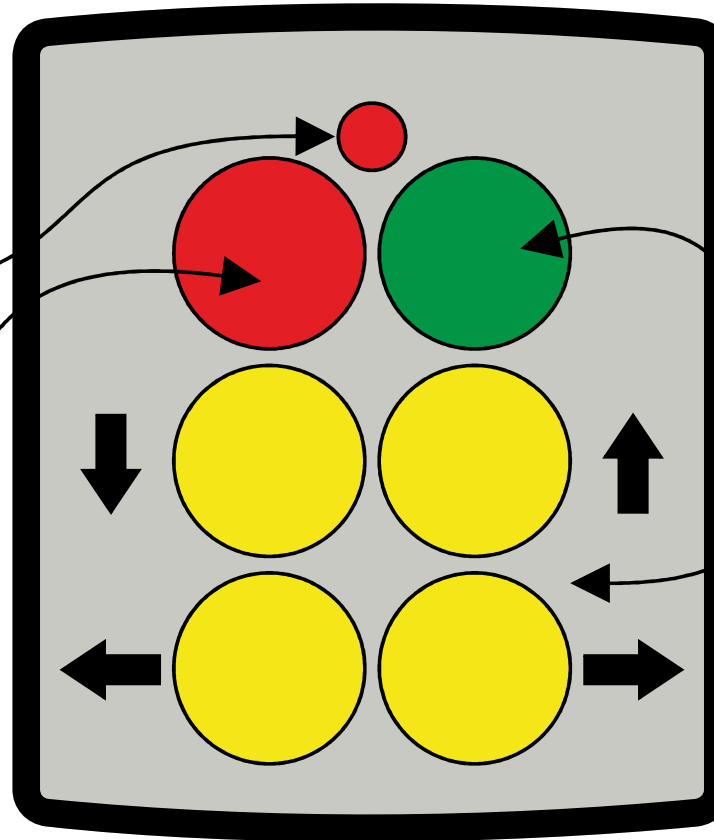

SET Button activates the Receiver and the keypad function buttons

Yellow function buttons

Transmitter uses 2 x AAA Alkaline batteries




SAFETY FEATURE

The Transmitter sends a STOP signal after 30 minutes; this de-activates both the Receiver and the Transmitter.

1. Coding into Slot 1

1. Ensure Receiver is OFF
2. Press and hold SET and STOP on Transmitter until LED goes OFF
3. LED on Transmitter will flash once to indicate slot 1
4. Turn ON Receiver
5. Wait for green LED on Receiver to flash slowly
6. Press and hold SET on Transmitter until green LED on Receiver flashes quickly several times
7. Check Receiver is coded correctly by pressing SET then operating any function

PRESS & HOLD
both STOP (Red)
and SET (Green)

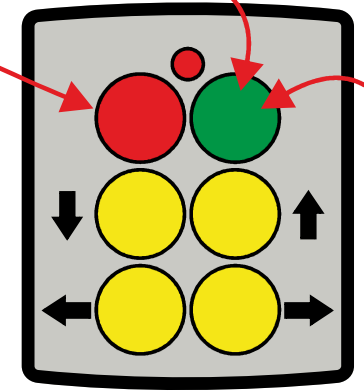

Then PRESS and
HOLD SET
for 5 seconds

2. Coding into Slot 2

1. Ensure Receiver is OFF
2. Press and hold SET and STOP on Transmitter until LED goes OFF
3. LED on Transmitter will flash once to indicate slot 1
4. Press SET to select slot 2 – the LED on Transmitter will flash twice
5. Turn ON Receiver
6. Wait for green LED on Receiver to flash slowly
7. Press and hold SET on Transmitter until green LED on Receiver flashes quickly several times
8. Check Receiver is coded correctly by pressing SET then operating any function